

# Exactoscale Limited - P4 Locomotive Wheels

	Part No.	Description (In)side, (Out)side cylinder	Spokes	Throw (in)	Crankpin position	Used on (examples only)	Actual scale dia. (* = worn)
<b>Driving Wheels</b>	4DW P01	GER 4ft (In)	15	11	In Line	J67, J68, J69 (goods)	4ft
	4DW P02	GER 4ft (In)	10	10	Between	J67, J68, J69 (passenger)	4ft
	4DW P03	GER 4ft 11in (In)	15	11	In Line	Y14, J15, J17, J20	4ft 10in*
	4DW P05	GWR 6ft 6in (Out)	22	14	Between	GWR King	6ft 5in*
	4DW P06	SR 5ft 6in (Out)	17	14	Between	SR N Mogul	5ft 6in
	4DW P20	LNER 4ft 8in (In)	14	11	Between	J50	4ft 7in*
	4DW P21	LNER 4ft 8in (Out)	14	13	Between	O2	4ft 7in*
	4DW P22	LNER 5ft 2in (In)	16	11	Between	J39	5ft 1in*
	4DW P23	LNER 5ft 2in (Out)	16	13	Between	P1	5ft 1in*
	4DW P24	LNER 5ft 8in (In)	18	11	Between	N2	5ft 6in*
	4DW P25	LNER 5ft 8in (Out)	18	13	Between	K3	5ft 6in*
	4DW P27	LNER 6ft 2in (Out)	18	13	Between	P2, V2, B1, A2	6ft 1in*
	4DW P29	LNER 6ft 8in (Out)	20	13	Between	A1, A3, A4	6ft 8in
<b>Tender Wheels</b>	4TW P01	GER 4ft	10	n.a.	n.a.	J15, J20	4ft
	4TW P20	LNER 3ft 9in	12	n.a.	n.a.	K3, J39	3ft 8in*
	4TW P21	LNER 3ft 9in	disc	n.a.	n.a.	K3, P1, J39	3ft 8in*
	4TW P22	LNER 4ft 2in	12	n.a.	n.a.	A3	4ft 1in*
	4TW P23	LNER 4ft 2in	disc	n.a.	n.a.	A4, P2	4ft 1in*
<b>Bogie and Pony Wheels</b>	4BW P20	LNER 2ft 8in	10	n.a.	n.a.	O2 pony	2ft 8in
	4BW P21	LNER 3ft 2in	10	n.a.	n.a.	A3, A4, B1 bogies, K3 pony	3ft 2in
	4BW P22	LNER 3ft 8in	10	n.a.	n.a.	A3, A4 Cartazz1 trucks, N2	3ft 8in

Range available from 17 April 2010. For details of prices and of axles, crankpins, assembly tools and instructions, see our website.

[www.exactoscale.co.uk](http://www.exactoscale.co.uk)

Tel: 01245 263779

20 Waterson Vale, Moulsham Lodge, Chelmsford, Essex CM2 9PB